

Revello Peristaltic Pump

addendum

- Read this carefully before operating the pump.
- One person should be assigned to maintain the pump. This primary operator should train additional operators. However, maintenance or adjustments should be made by, or under the careful supervision of the primary operator.

Clarifications to the manual

1. Grease gun and tube of silicone lubricant are included with the pump.
2. See Fig. 1. Fill Auto Dispenser with the silicone lubricant.
3. During operation, open the 1/4" ball valve located below the Auto Dispenser.
4. Also, turn the thumbscrew valve about 1-2 turns counterclockwise. This is located directly below the Auto Dispenser.
5. See Fig. 2. The Nord Gearbox has a fill plug and a drain plug. Check the oil annually by opening the fill plug and inserting a small stick or piece of wire. Correct fill level is to the top. Change the oil after the first 2000 hours of operation. Use ISO VG 220 gear oil (or equivalent).
6. See Fig. 3. Lubricate the bearing annually.



Fig. 1. Auto Dispenser. Open both the ball valve (1) and the thumbscrew valve (2) during operation.


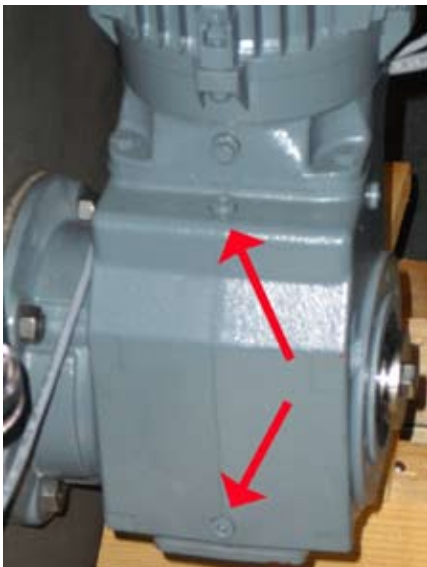


Fig. 2. Gearbox fill and drain plugs.



Fig. 2. Bearing

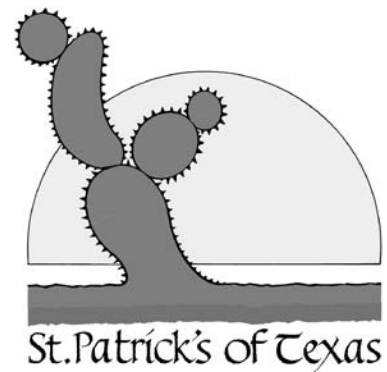

This manual and parts are available online.

www.StPats.com
stpats@bga.com